



1. MAIN UNIT SETUP


Ⓝ : MEANS PRESS BUTTON N MORE THAN 2 SECONDS.
Ⓞ : MEANS PRESS BUTTON N QUICKLY
{N=KEYNUMBER: MODE Button. Ⓞ SET Button. Ⓟ }

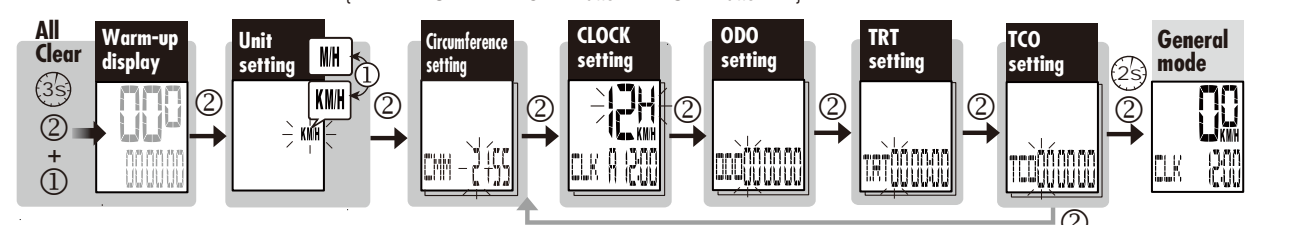


Circumference setting

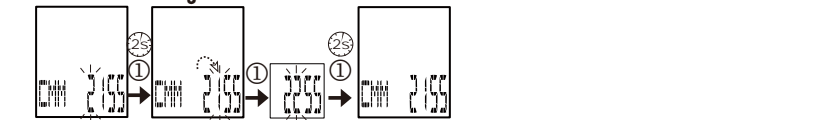


CLOCK setting

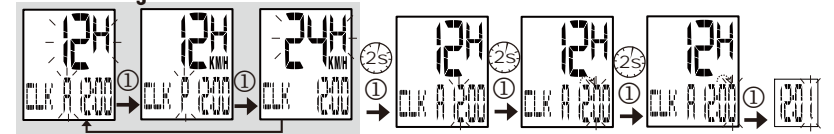

2. FUNCTION SCREEN

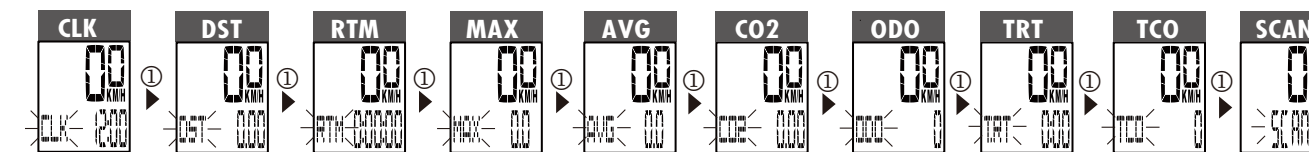


3. RESET OPERATION

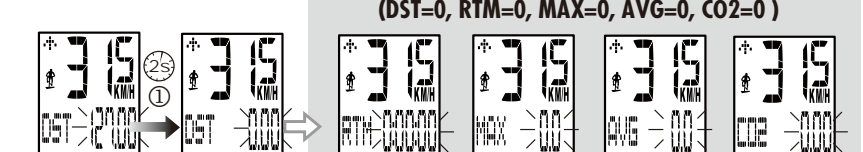



4. POWER AUTO ON/OFF



5. LOW BATTERY INDICATOR

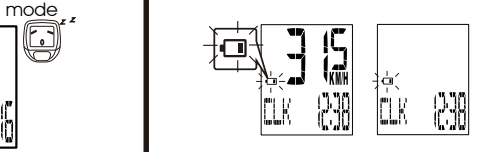


6. BATTERY CHANGE

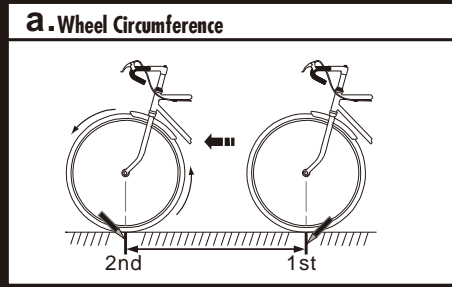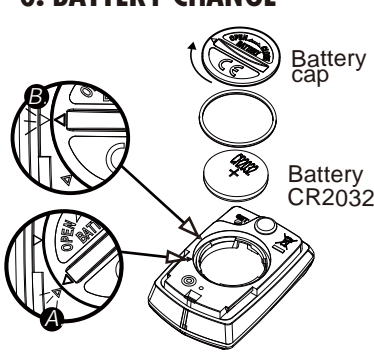

b. Popular Tires Circumference Reference Table

Table with columns for Tire Size and Circumference Number. Includes sizes like 18 Inch, 20 Inch, 22 Inch, etc.

GENERAL MODE DISPLAY

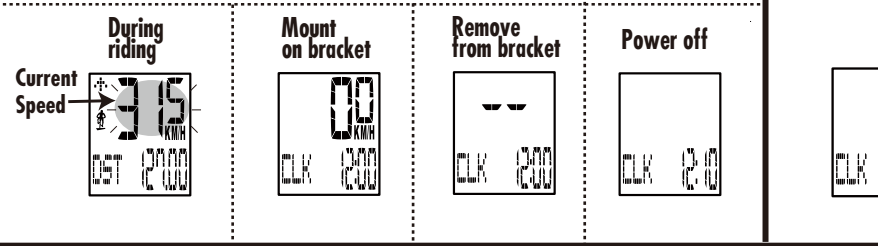

DATE SETTING MODE

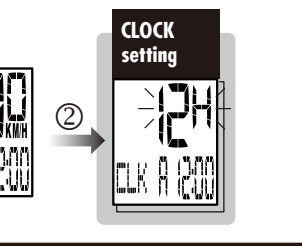


Table with columns for Functions and Specification. Lists SPD, AVG, MAX, DST, ODO, RTM, TRT, CLK, CO2, and TCO with their respective specifications.

FUNCTIONS

English section describing functions: Current Speed, DST Trip Distance, ODO Odometer, CLK 12HR or 24HR Clock, AVG Average Speed, MAX Maximum Speed, RTM Riding Time, TRT Total Riding Time, Speed Pacer, SCAN, CO2 CO2 saving amount, and TCO Total CO2 saving.

MAIN UNIT SETUP (Fig. 1)

INITIATE THE COMPUTER (ALL CLEAR)
1. A battery is already loaded in the main unit when purchased.
2. Hold down the MODE button Ⓞ and SET button Ⓝ simultaneously for more than 3 seconds to initiate the computer and clear all data. IMPORTANT: Be sure to initiate the computer before it being used, otherwise the computer may run errors.

RESET OPERATION (Fig. 3)

1. Hold down the MODE button Ⓞ and SET button Ⓝ simultaneously for more than 3 seconds to initiate the computer and clear all data. IMPORTANT: Be sure to initiate the computer before it being used, otherwise the computer may run errors.

TROUBLE SHOOTING

Trouble shooting table with columns for Problem, Check Item, and Remedy. Lists issues like 'Main unit No display', 'No current speed or incorrect data', etc.

FUNCTIONI

Italiano section describing functions: Velocità di corsa, DST Distanza del percorso, ODO Odometro, CLK Orologio a 12 ore o 24 ore, AVG Velocità media, MAX Velocità massima, RTM Durata del percorso, TRT Tempo di marcia totale, SCAN, CO2 Risparmio CO2, and TCO TCO accumula il totale del risparmio CO2.

PREPARAZIONE DEL COMPUTER

AVVIO DEL COMPUTER (azzeramento)
1. Al momento dell'acquisto il computer è già dotato di una batteria.
2. Premere contemporaneamente il pulsante MODE Ⓞ e SET Ⓝ per oltre tre secondi per avviare il computer e cancellare tutti i dati. IMPORTANT: Accertarsi di eseguire le operazioni di avviamento del computer prima di utilizzarlo, altrimenti potrà fornire risultati errati.

OPERAZIONE RESET (AZZERAMENTO)

1. Tenere premuto il pulsante MODE Ⓞ finché sullo schermo a cristalli liquidi non sarà visualizzato alcun dato, quindi lasciare il pulsante. Il computer azzererà i dati memorizzati di AVG, DST, RTM, MAX e CO2.

TROUBLE SHOOTING

Trouble shooting table with columns for Problema, Cosa Controllare, and Rimedio. Lists issues like 'Nessuna indicazione sul display', 'Non compare la velocità di corsa', etc.

FUNCTIONEN

Deutsch section describing functions: Aktuelle Geschwindigkeit, DST Fahrstrecke, ODO Gesamtkilometerstand, CLK 12-Stunden oder 24-Stunden Uhr, AVG Durchschnittsgeschwindigkeit, MAX Höchstgeschwindigkeit, RTM Fahrzeit, TRT Gesamtfahrzeit, Geschwindigkeitsanzeiger, Auto scan, CO2 CO2-Einsparung, and TCO TCO zählt den Wert der CO2-Gesamteinsparung zusammen.

EINSTELLUNG DES COMPUTERS

STARTEN DES COMPUTERS (alles löschen) (Abb. 1)
1. Beim Kauf des Hauptteils ist die Batterie bereits eingesetzt.
2. Drücken Sie den Modus-Knopf Ⓞ und Set-Knopf Ⓝ gleichzeitig mindestens 3 Sekunden lang, um den Computer zu starten und um alle Daten zu löschen. Wichtig: Starten Sie den Computer, bevor Sie ihn erstmals benutzen. Andernfalls können Fehler auftreten.










SET-KNOPF

Wenn Sie zu oder aus den Einstellungsmenü des Rad, Radumfanges oder der Uhrzeiteinstellung möchten, müssen Sie den Set-Knopf Ⓝ drücken.

FEHLERBESEITIGUNG

Trouble shooting table with columns for Problem, Zu Überprüfende Teile, and Lösung. Lists issues like 'Keine Anzeige', 'Keine aktuelle Geschwindigkeit', etc.



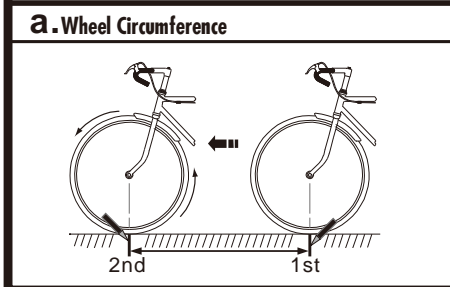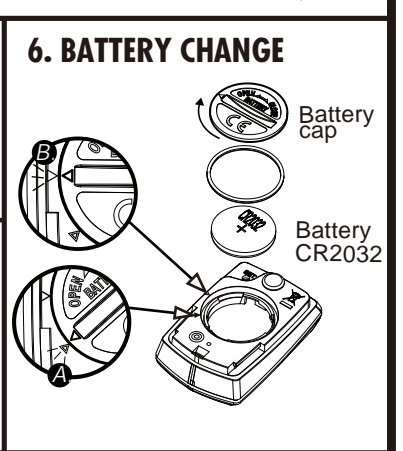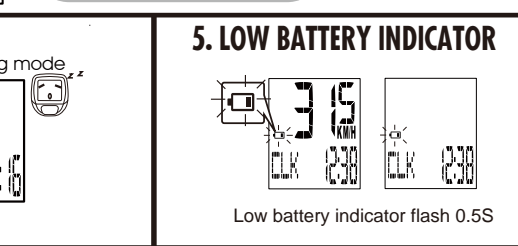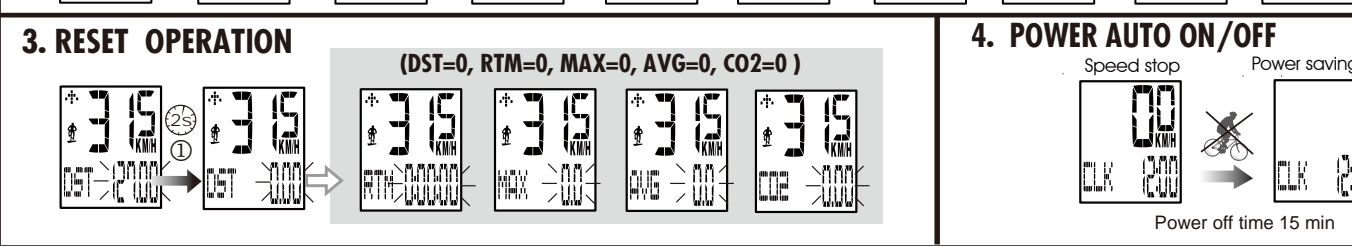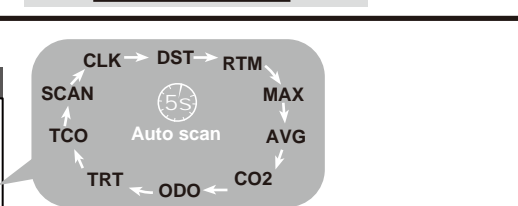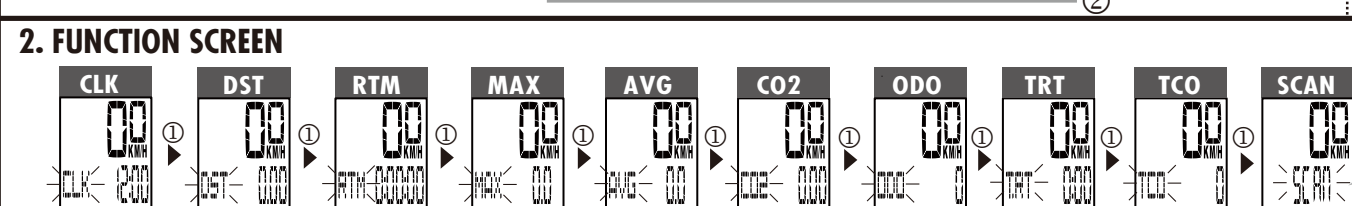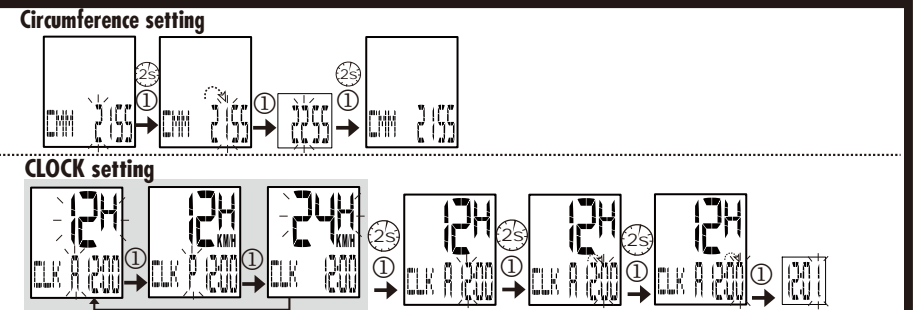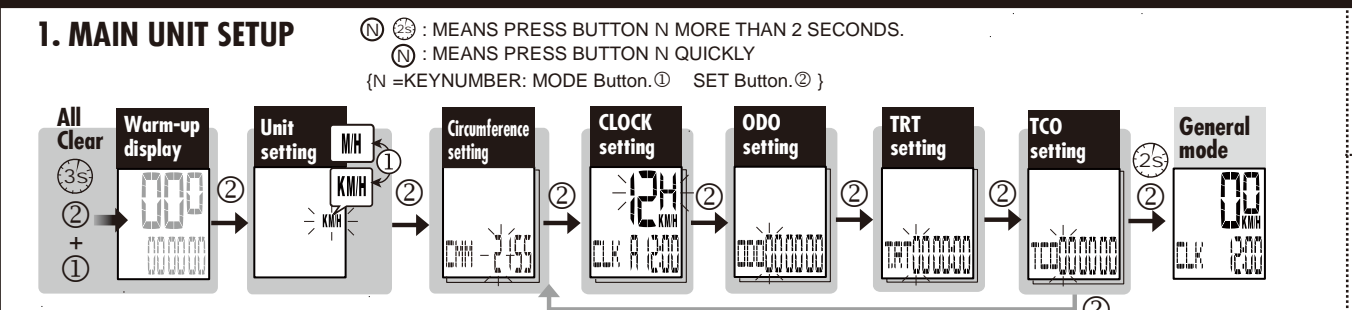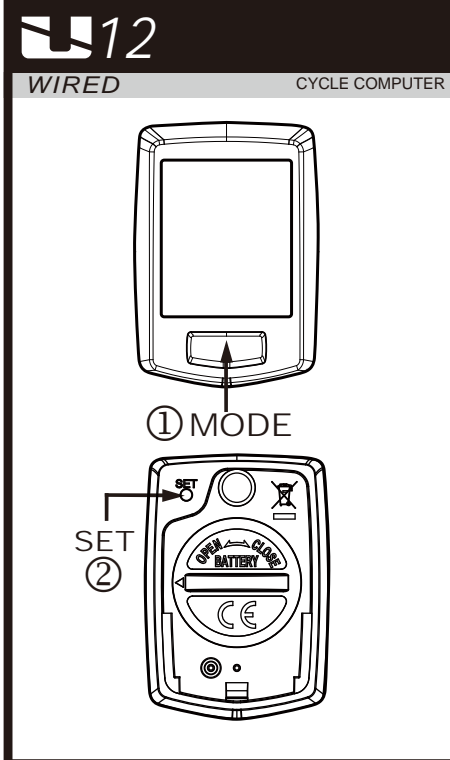

b. Popular Tires Circumference Reference Table

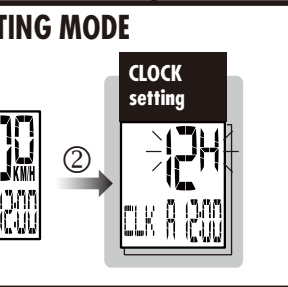
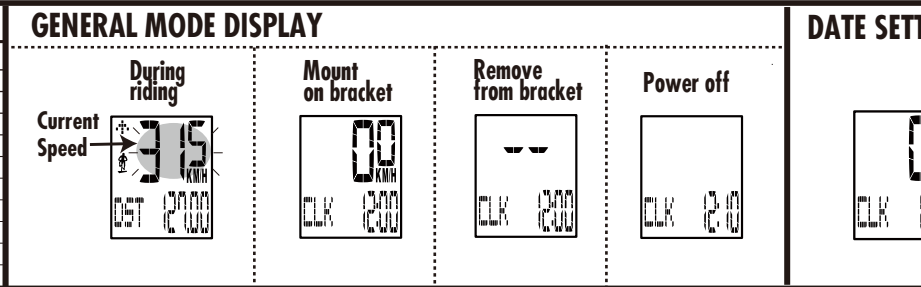


Table with 2 columns: Functions and Specification. Lists various metrics like Current speed, Average speed, Maximum speed, etc.

English functional section: FONCTIONS. Includes sections for Vitesse actuelle, DST, ODO, CLK, AVG, RTM, MAX, TRT, SCAN, CO2, TCO, and a comparison table.

French functional section: RÉGLAGE DE L'UNITÉ PRINCIPALE. Includes sections for INITIALISER LE CYCOMTEUR, BOUTON SET, REMISE À ZÉRO, MARCHÉ-ARRÊT AUTOMATIQUE, MISE EN MARCHÉ/ARRÊT AUTOMATIQUES, INDICATEUR DE PILE FAIBLE, REMPLACEMENT DE LA PILE, and PRÉCAUTIONS.

Spanish functional section: INSTALACIÓN DE LA UNIDAD PRINCIPAL. Includes sections for INICIO DEL COMPUTADOR, SELECCIÓN DE UNIDADES, CIRCONFERENCIA DE LA RUEDA, INSTALACION DEL RELOJ, and PRECAUCIONES.

Spanish section: DEPNAGE. Includes sections for SOLUTION DE PROBLEMES, a table of common issues and solutions, and instructions for battery replacement.

Dutch functional section: FUNCTIES. Includes sections for Huidige Snelheid, DST, ODO, CLK, AVG, RTM, TRT, SCAN, CO2, and TCO.

Dutch section: HOOFDSCHERM. Includes sections for INITIALISEREN VAN DE HOOFDCOMPUTER, BOUTON Y OPERACIONES HABITUALES, and WIELMETREK.

Dutch section: SET KNOP. Includes sections for SET KNOP, AUTOMATISCHE START/STOP FUNCTIE, and AUTOMATISCHE AAN/UIT SCHAKELING.

Dutch section: PROBLEEM. Includes sections for PROBLEEM, a table of common issues and solutions, and instructions for battery replacement.

English functional section: FUNCTIONS. Includes sections for Velocidad total de marcha, DST, ODO, CLK, AVG, RTM, TRT, SCAN, CO2, and TCO.

English section: INSTALLATION OF THE MAIN UNIT. Includes sections for INITIALISATION OF THE COMPUTER, SELECTION OF UNITS, WHEEL CIRCUMFERENCE, and PRECAUTIONS.

English section: SET BUTTON. Includes sections for SET BUTTON, AUTOMATIC START/STOP FUNCTION, and AUTOMATIC ON/OFF SWITCHING.

English section: PROBLEM SOLUTION. Includes sections for PROBLEM SOLUTION, a table of common issues and solutions, and instructions for battery replacement.